



*J. Larsen Pty. Ltd.*

ABN 72 009 706 745 (Established 1917)



Master Locksmiths and Manufacturers of Padlocks, Lock Cylinders and Key Blanks

# GLOBALOCK ROTOBOLT TYPE B207

## END USER INSTRUCTIONS

These locks are normally installed with the factory set combination 1-2-3-4-5-6.

### To open:

Press 1-2-3-4-5-6 and then turn the safe handle to open. Leave the safe handle in the unlocked position until the door is closed. The lock will then automatically lock.

### To change combination:

**Note: Always do this with the safe door open and in the locked position.**

1. Enter the existing combination and hold down the last digit until a double beep is heard and the LED stays on.
2. Now press 0 and the unit will double beep again.
3. Enter the new combination twice
4. Enter the new combination again and the lock will beep twice if correct or if unsuccessful a long beep will be heard.
5. You can now turn the safe handle and lock the safe.

### Low battery warning:

The lock will beep 6 times after opening to indicate a low battery. To replace the battery, slide cover at base of entry pad and install new Duracell 9V alkaline battery.

### Note:

If an incorrect code is entered, the lock will give one continuous beep. If four incorrect opening attempts are made, lock will go into sleep mode for 5 minutes and the LED will flash every 10 seconds. Once lock wakes up, 2 more incorrect attempts will re-activate sleep mode.