



J. Larsen Pty. Ltd.

ABN 72 009 706 745 (Established 1917)



Master Locksmiths and Manufacturers of Padlocks, Lock Cylinders and Key Blanks

GLOBALOCK ROTOBOLT TYPE B207

END USER INSTRUCTIONS

These locks are normally installed with the factory set combination 1-2-3-4-5-6.

To open:

Press 1-2-3-4-5-6 and then turn the safe handle to open. Leave the safe handle in the unlocked position until the door is closed. The lock will then automatically lock.

To change combination:

Note: Always do this with the safe door open and in the locked position.

1. Enter the existing combination and hold down the last digit until a double beep is heard and the LED stays on.
2. Now press 0 and the unit will double beep again.
3. Enter the new combination twice
4. Enter the new combination again and the lock will beep twice if correct or if unsuccessful a long beep will be heard.
5. You can now turn the safe handle and lock the safe.

Low battery warning:

The lock will beep 6 times after opening to indicate a low battery. To replace the battery, slide cover at base of entry pad and install new Duracell 9V alkaline battery.

Note:

If an incorrect code is entered, the lock will give one continuous beep. If four incorrect opening attempts are made, lock will go into sleep mode for 5 minutes and the LED will flash every 10 seconds. Once lock wakes up, 2 more incorrect attempts will re-activate sleep mode.